



H0015 ALUMINIUM RAMP

400KG CAPACITY

INSTRUCTION MANUAL

Foldable aluminium loading ramp in 2 parts with side edges and non-slip surface. Equipped with a safety pin to secure the ramp during loading and unloading and handles for easy handling.

THE MAXIMUM LOAD CAPACITY IS 400 Kg
(This rated capacity is based on a load evenly distributed over 2 axles)

1. WARNING

- 1.1 Never exceed the rated capacity of your ramp.
- 1.2 Use caution at all times when loading and unloading.
- 1.3 Only load and unload onto a stable, level surface.
- 1.4 Never stand in the path of equipment or vehicle. Keep bystanders and children away.
- 1.5 Do not leave attached ramps unattended.
- 1.6 Beware of hinged areas. Keep all body parts clear of hinged areas.
- 1.7 Ramp surfaces will have less traction when wet. Use caution.
- 1.8 The ramp is not a toy. DO NOT use the ramp as a jump ramp, scaffold, deck, ladder or other use.
- 1.9 Always make sure that the top of the ramp is properly secured with the safety pin before using.
It is mandatory to use the supplied safety pin to prevent the ramp from falling out of the vehicle.
- 1.10 ALWAYS follow the manufacturer's recommendations.

2. USER'S GUIDE

A. Loading

- 1.1. Place the load in the direction of the ramp with the front wheel (s) towards the vehicle.
- 1.2. Move the load slowly and gradually up the ramp, making sure the wheels are following the ramp.
- 1.3. During the wet conditions make sure that the wheels do not slip on the surface of the ramp.
- 1.4. Always have a qualified assistant present while using the ramp.

B. Unloading:

- 2.1. Position the load down from the vehicle directly to the edge of the ramp.
- 2.2. Let the load move back to the bottom of the ramp, making sure the wheels are following the ramp.
- 2.3. During the wet conditions make sure that the wheels do not slip on the surface of the ramp.
- 2.4. Always have a qualified assistant present while using the ramp.

3. MAINTENANCE

- 3.1. It is the responsibility of the user to check the loading ramp and these different components before each use.
- 3.2. If the ramp is damaged, it should NOT be used.
- 3.3. Maintain the ramp in good condition by regular cleaning.
- 3.4. Lubricate the hinges regularly.